

WASHING PANORAMIC GRAPHICS

PLEASE NOTE:

Some fabrics are flame-retardant treated (category M1/B1).
Washing them will cause them to lose this property

BEFORE WASHING

Use a white eraser to remove any dust spots.
To avoid discoloration, always wash the entire graphic and never just one section.



Wash at 30°C (90°F)

Apply a very small amount of colorless liquid detergent to any stains before starting the wash cycle.

Do not pour detergent into the washer drum.

Fold the graphic with the image side facing up when placing it in the machine.



Air dry

Preferably, re-attach the graphic to its structure.

Do not dry clean.



Eliminating wrinkles *(additional solution)*

Use a hair dryer to reduce the visibility of any wrinkles.

